


Pannello

PVC WALL & CEILING PANELLING

Installation Guide




Step 1: Gather all required tools and materials.

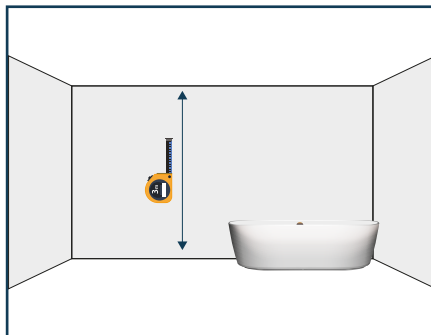


Step 2: Measure the wall height.




Step 3: Cut panels to match wall height. Please wear safety gear.

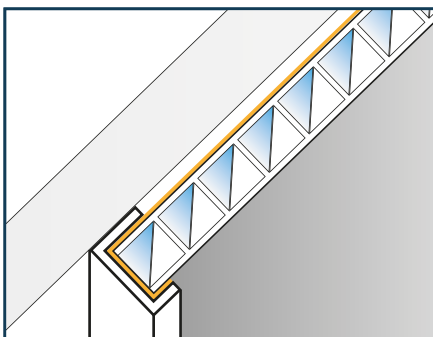


Step 4: Position and fix your initial end trim first, apply solvent free adhesive to the back of the panel to install.

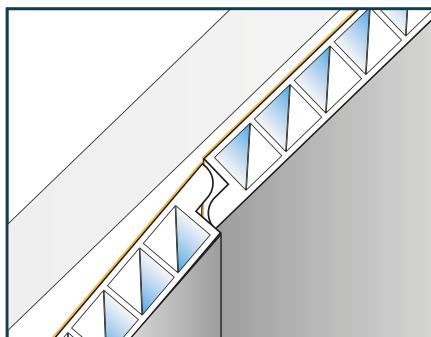


Step 5: Continue installing panels; using the tongue & groove to lock each panels into place.

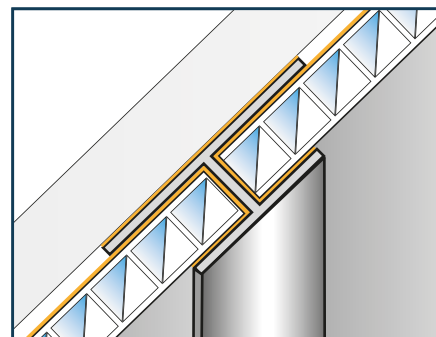

Step 6: If a panel has been cut to width, use an **H Join Trim** to join it to the next panel.

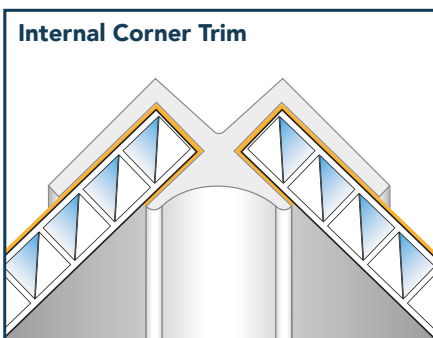


Corner Trims: Use an Internal or External Corner Trim to connect two panels at corners.

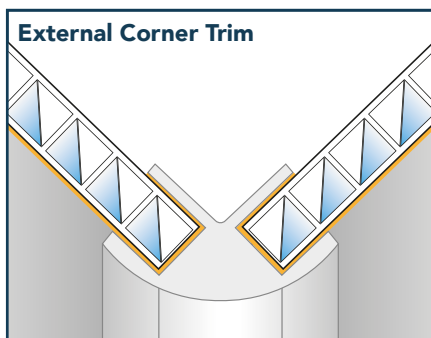


Step 8: Your installation is now complete!


Installation Options

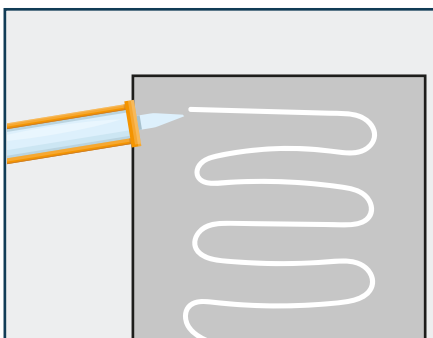

A: Apply solvent free adhesive directly onto clean, dry, and primed plaster or plasterboard.

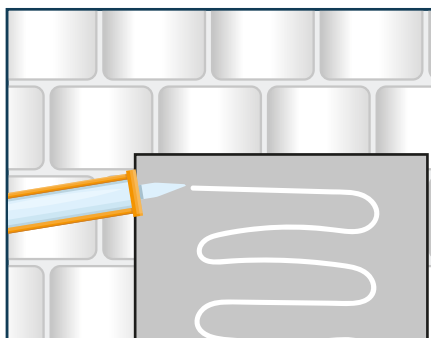

B: Lightly sand glossy tiles for better grip, and apply solvent free adhesive directly on top of the tiles.

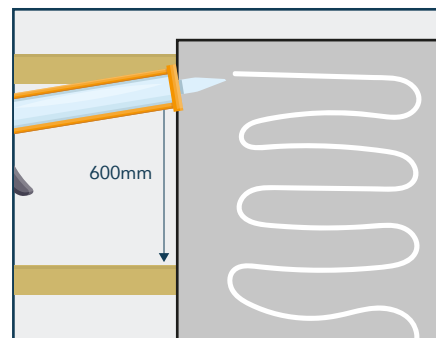

C: Ideal for uneven walls. Install wooden battens horizontally, apply adhesive to panel to stick to batten.